




**Instruction manual**  
**Electric kettles**  
**DKTL0005**

## Product Structure Graphic:

1. Lid Button
2. Spout
3. Lid
4. Body
5. Light
6. Handle
7. On/Off Switch

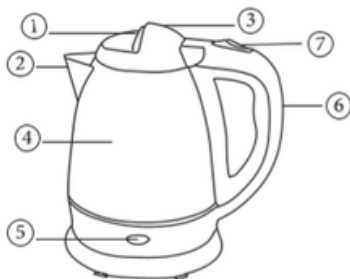

## Safety Tips:

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Ensure the water do not over the marks or Max.
- Always switch off the appliance before removing from the base.
- The appliance must not be immersed in any liquid.
- Do not allow the base to become wet.
- The Danger of scalding-avoid steam from the spout or when opening the lid.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance

### **Cleaning, Care & Maintenance:**

- Always turn off and disconnect the appliance from the power supply before cleaning.
- Use soapy water and a damp cloth to clean the exterior of the appliance. The appliance must not be immersed in any liquid.
- Dry thoroughly after cleaning.
- The spout filter slides out for ease of cleaning.
- Periodically clean the inside of the appliance using a suitable descaling solution.

### **Troubleshooting**

| <b>Fault</b>                   | <b>Probable Cause</b>              | <b>Action</b>                                                 |
|--------------------------------|------------------------------------|---------------------------------------------------------------|
| <b>The unit is not working</b> | <b>The unit is not switched on</b> | <b>Check the unit is plugged in correctly and switched on</b> |
|                                | <b>Plug and lead are damaged</b>   | <b>Call agent or qualified technician</b>                     |
|                                | <b>Power supply</b>                | <b>Check power supply</b>                                     |
|                                | <b>Internal wiring fault</b>       | <b>Call agent or qualified technician</b>                     |
|                                | <b>Thermo control fault</b>        | <b>Call agent or qualified technician</b>                     |

### **Electrical Wiring:**

- This appliance is supplied with a 2 or 3 pin plug and lead.
- The plug is to be connected to a suitable mains socket.
- This appliance is wired as follows:
- This appliance must be cabled, using a dedicated earthing circuit.
- If in doubt consult a qualified electrician.
- Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.



**Introduction:**

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your product.

**Pack Contents:**

The following is included:

Kettle

Instruction manual

We pride ourselves on quality and service, ensuring that at the time of packaging the contents supplied are fully functional and free of damage. Should you find any damage as a result of transit, please contact your dealer immediately,

**Operation:**

To use:

1. Lift the lid and fill with cold water. Do not exceed the 'MAX' level.
2. Close the lid securely.
3. Connect the appliance to a mains power supply.
4. Push the power switch down to the T position. The power indicator turns On and the water will begin to boil.
5. When the water has boiled the switch will flick back up to the 'O' position. The power indicator light will turn Off.

**Note:**

Before using the appliance for the first time fill and boil it twice. Discard the water each time.

**Note:**

The boiling process can be interrupted at any time by manually flicking up the switch.

**WARNING:**

There is a danger of scalding from steam. Take care during operation and when opening the lid.

**Kettle**

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.
2. Children being supervised not to play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
4. This appliance is intended to be used in household and similar application such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential-type environments;
  - bed and breakfast type environments.
5. If the kettle is overfilled, boiling water may be ejected.
6. The appliance is only to be used with the stand provided.

