



**DKTL0036**

Dolphy Australia  
The sign of quality

Model	Rated Power	Rated Voltage	Rated Frequency	Class I
PK-3088	1350-1500W	220-240V~	50/60Hz	

**General Safety Instructions :**

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.

The appliance is designed exclusively for private use and the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.

When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.

Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.

Check the appliance and the cable for damage regularly. Do not use the appliance if it is damaged.

Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid exposure to danger, always have a faulty cable replaced only by the manufacturer, by our customer service or by a qualified person with a cable of the same type.

Use only original spare parts.

Pay careful attention to the following "Special Safety Instructions".

**Special Safety Instructions for this Machine :**

Use only cold water when filling.

The water level must be between the MAX and MIN. marks! If the water level exceeds the max. level, boiling water and steam may be ejected, which might raise a hazard to the user.

Switch the machine off before removing it from the base.

The kettle is only to be used with the stand provided.

Do not immerse in water.

If the kettle is overfilled, boiling water may be ejected.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

Always ensure that the lid is tightly closed.

The base and exterior of the machine must not become wet.

This appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

☐ Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

☐ Children shall not play with the appliance.

☐ This appliance is intended to be used in households and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

### **First Use of the Machine :**

Please read these operating instructions carefully and keep them in a safe place. Before using for the first time, boil fresh water at least twice in the appliance. Use only water without any additives or ingredients.

### **Use :**

- 1.Place the machine on a flat surface.
- 2.Open the lid. Then fill in some water. The water level can be read off using the water level indicator on both sides of the kettle. Please do not overfill the kettle.
- 3.Close the lid by releasing the flap on the handle.
- 4.Place the kettle flush on the base.

### **Electrical connection:**

Check whether the electrical voltage that you intend to use is the same as that of the machine . Details are to be found on the label on the base .

Only connect the machine to a properly installed 220-240V ~, 50/60Hz safety socket .

5.Switch the machine to position “1”. To start heating and the translucent body will be changed to blue illuminating gradually.

6.After boiling the machine switches off automatically.

Disconnect the machine from the mains electricity supply .

Do not press up the lid when pouring .


### **Cleaning:**

!Always pull out the plug from the socket before cleaning!

!The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.

**Decalcifying:**

- Should the appliance switch off before reaching boiling point. This is a sign that decalcifying is necessary
- Any regular descaling agent may be used, provided the relevant instructions are observed. Do not fill the kettle to the upper mark to avoid spillage if the descaling agent causes the water to foam.
- To clean the kettle thoroughly of any decalcification residues, let it go through several boiling cycles, using clean water with each cycle. Rinse the kettle with clean water afterwards

Correct Disposal of this product	
	This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

**Warranty Information:**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances