




INSTRUCTION MANUAL

Hair Dryer

DPHD0021

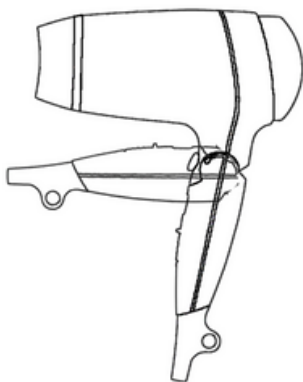

Before using this appliance, please read carefully this instruction manual.

OPERATING INSTRUCTIONS

Before plug the appliance, be sure that the power switch in 0 position.

Plug the unit and switch the power on.

Dry your hair.

In order to have a rapid drying:remove the concentrator and set the power switch in high heat setting/air speed

Hair styling:Attach the concentrator so that the air jet is more concentrated in a precise hair zone.

Once your hair have been well dried, switch the appliance off and unplug it.

GENERAL SAFETY INSTRUCTIONS

Before connecting the appliance, check the voltage indicated on the appliance corresponds to the local mains voltage.

Always unplug the appliance:

When it is not in use

When you attach or remove accessories

Before cleaning it

In case of troubles

Unplug the appliance, only after having switched it off. Never try to unplug the product pulling it from the cable or from the product itself.

Never wind the cord around the main body

In order to protect children from risks of electrical shocks, never leave the appliance unattended when it is plugged in. Always store it out of their reach.

Check regularly both the product and the cable: in case you find



some damages, the product must not be used.

Do not try to repair the product by yourself but always address to authorised centres. Keep the device and the cable away from heat, direct sunlight, moisture, sharp objects and similar ones.

Never leave the product unattended if switched on! Switch it off and unplug if when you do not use it, even if it is only for a while!

Use original accessories only. When hairdryer is working, its air inlets and outlets must never be closed.

The product must not be absolutely plunged in water or other liquids or coming in contact with them! Never use the appliance with wet or moist hands.

In case the appliance becomes moist or wet, please unplug it immediately from the socket.

DO NOT TRY TO REACH THE PRODUCT INTO WATER!

Use the device only for its intended purpose, that is, as hair dryer for domestic use. Any other use is improper and therefore hazardous.

Additional protection is offered by the installation of a fault current protective device with a rated breaking current of not more than 30 mA in the domestic electrical system. Ask a professional electrician for advice.

Damaged cables must be immediately replaced. Every replacement technicians, provided with special tools. For any replacement: use always original spare parts or of the same type.

SPECIAL SAFETY INSTRUCTIONS FOR THE DEVICE



Keep the device away from the water and moisture such as bathtubs, shower areas or even persons having a bath! Such situations constitute a DANGER TO LIFE Through electric shock!

Attention: the nozzle becomes hot during operation.

SYMBOL



Class II appliance



Do not use the appliance while you are having a bath or a shower

Specifications and designs are based on the available at the time of printing and subject to change without notice.

DISPOSAL



Once the product life has ended or his components do not work anymore their disposal should be carried out according to the current regulations.