 
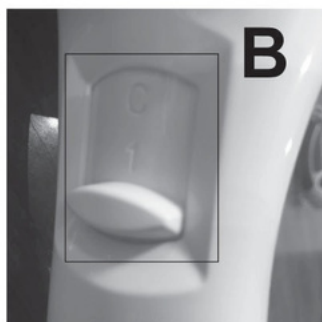 
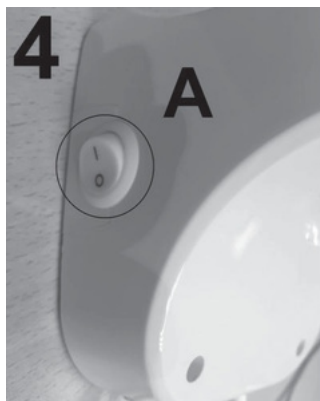 
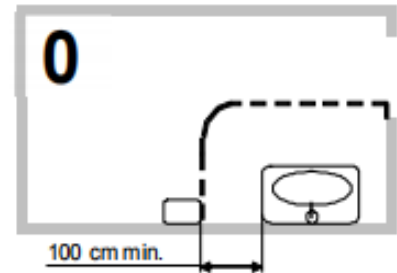 


**INSTALLATION AND USER'S MANUAL FOR HAIR DRYERS**  
**02011.W**

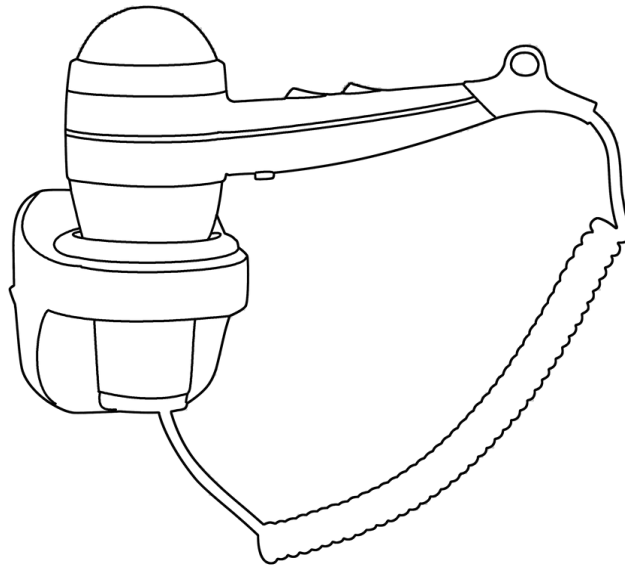

## INSTALLATION MANUAL

### ATTENTION!

- ☐ The installation must be done by qualified technician according with the legal European Standards.
- ☐ Before any electrical manipulation, cut the electrical current.
- ☐ Before the installation check if the selected installation place fulfils the security distances which appears at the CEI standards. (fig-0)
- ☐ If the plug cord is damaged, it must not be substituted, and the hair dryer must be throwing out.



- ☐ When the hair dryer is used in a bathroom, unplug after use because the proximity of water presents a risk, even when the hair dryer is switch off.
- ☐ The device must be installed considering that, when the movable part is fully extended, it is beyond the scope of a person which is taking a bath or a shower.
- ☐ As additional protection, we recommend the installation of a residual current device (differential switch) with a current default of operation not exceeding 30mA in the electrical circuit which supplies the bathroom.

### INSTALLATION:

To install the hair dryer, Place the ring base at the desire position using it like a template. To do it remove the hanger cover (figure 1), mark up the position of the three holes, subject the hanger base to wall using the supplied screws (figure 2) and, finally, reinstall the hanger cover (figure 3) Plug the appliance to the electric network.

From that moment, the hair dryer can stay in the ring provided for that purpose and is ready for use.

## USER'S MANUAL

### USE:

Place the switch 'A' at the base (Figure 4-A) in position 'I'. Remove the hair dryer of its ring and choose the desired air flow using the switch 'B' (figure 4-B). You can choose between two positions. To switch on the hair dryer, keep pressing the switch button 'C' (figure 4-C). Releasing the button, the hair dryer stops automatically.

### MAINTENANCE:

The hair dryer doesn't need any special maintenance. Take care and do not use aggressive products which could damage the plastic. In any case, to use a wet rag without any other product is recommended. If the hair dryer is damaged or has a problem, please call to an authorized technical assistance service to avoid danger situations.

## WARRANTY

This device have 2 years of total guarantee against whatever manufacturing problem or damage, both damaged spare parts and labour cost will be included in this guarantee period. The validity of the guarantee starts from the purchasing date, certified by the seller's stamp, and expires at the end of the indicated period, even when the device has not been used. The guarantee has no validity when damages are caused by a incorrect operation, bad installation or not according with the legal rules, or are caused by people unauthorised by the manufacturer.

Brand name : \_\_\_\_\_

Model : \_\_\_\_\_

Serial n° : \_\_\_\_\_

Dealer'ssignature and stamp

FECHA/DATE: \_\_\_\_/\_\_\_\_/\_\_\_\_